

TEL : 82-32-880-0256  
 FAX : 82-32-889-5905  
 AFS : RKRRYNYX  
 E-mail : aisd@molit.go.kr  
 Web : http://ais.casa.go.kr

**REPUBLIC OF KOREA**  
**Ministry of Land, Infrastructure and Transport**  
**Office of Civil Aviation**  
 11, Doum 6-ro, Sejong-si, 30103, Republic of Korea

**AIRAC**  
**AIP**  
**Supplement 9/20**  
**27 AUG 2020**

**GEN : NIL**

**ENR : NIL**

**A D : SEOUL/Gimpo INTL(RKSS)**

**OPERATIONAL RESTRICTIONS**


**1. INTRODUCTION**

TCLL(Taxiway center line light) for TWY C2 at Gimpo INTL Airport will be phased unserviceable due to replacement.

**2. PERIOD**

From 1400 UTC 8 OCT 2020 To 2100 UTC 13 NOV 2020

**3. WORKING AREA** (See the diagram below)

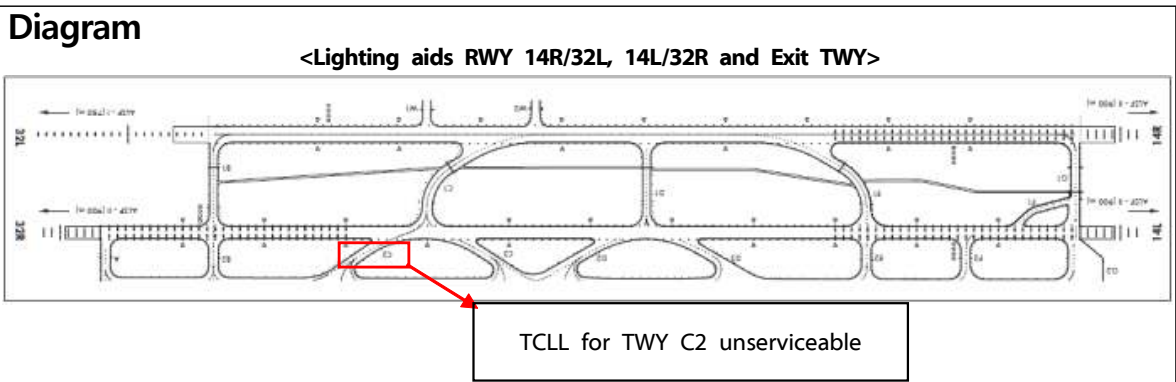


Location	Period	Working hours (UTC)
TWY C2	From 8 OCT 2020 To 13 NOV 2020	1400 ~ 2100 Daily

**4. REMARKS**

- (1) TCLL(Taxiway center line light) for TWY C2 is unserviceable From 8 OCT 2020 To 13 NOV 2020 irrespective of working hours.
- (2) During the unserviceable period, Low visibility procedure will be changed.  
(See the No. 5 Low visibility procedure)
- (3) After termination of the daily scheduled flight, work will begin.
- (4) Any change to the contents of these pages will be notified by NOTAM.

5. DIAGRAM

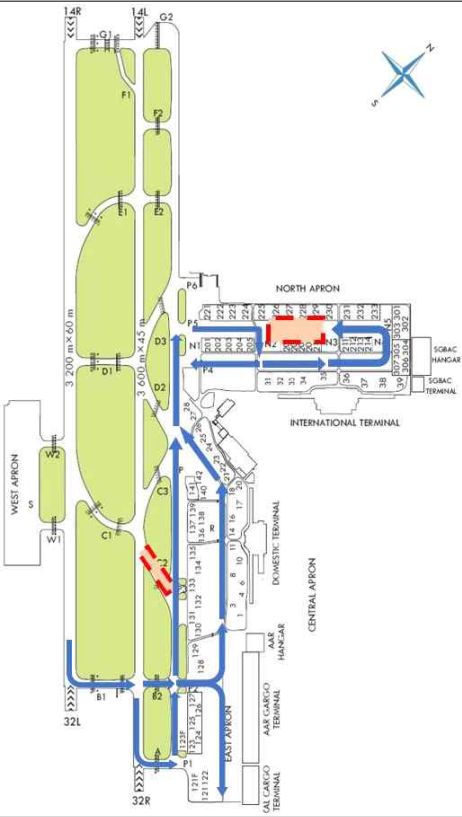	14R/L	32R/L
<p><b>Departure</b></p>	<p>(See the AIRAC AIP SUPPLEMENT 6/20 No. 6 Low visibility procedure)</p>	<p>(See the AIRAC AIP SUPPLEMENT 6/20 No. 6 Low visibility procedure)</p>
<p><b>Arrival</b></p>	 <p>The diagram illustrates the airport's terminal and apron configuration. Key features include:         <ul style="list-style-type: none"> <li><b>West Apron:</b> Located at the top left, with gates W1 through W5.</li> <li><b>East Apron:</b> Located at the bottom left, with gates E1 through E17.</li> <li><b>North Apron:</b> Located at the top right, with gates N1 through N24.</li> <li><b>Central Apron:</b> Located at the bottom right, with gates C1 through C16.</li> <li><b>Domestic Terminal:</b> Situated between the East and Central Aprons.</li> <li><b>International Terminal:</b> Situated between the North and Central Aprons.</li> <li><b>SGRAC Hangar and Terminal:</b> Located to the right of the International Terminal.</li> <li><b>Gate Numbers:</b> Various gate numbers are assigned to specific aprons, such as 131-134 on the East Apron and 201-204 on the North Apron.</li> <li><b>Compass Rose:</b> A blue compass rose is positioned in the upper right corner of the diagram, indicating North (N) and South (S).</li> </ul> </p>	<p>(See the AIRAC AIP SUPPLEMENT 6/20 No. 6 Low visibility procedure)</p>